



1. 初始状态。

1. Status before we start.



2. 将下扶手放置到扶手固定板上，对齐孔位。

2. Attach the lower handle to the steel plate.



3. 装上螺栓。

3. Put the bolts on.



4. 用扳手旋紧螺母。

4. Use



5. 下扶手装好后的状态。

5. This is how the mower looks like when the lower handle is there.



6. 将上下扶手连接，对好孔位。

6. Attach the upper handle to the lower handle.



7. 用压紧扳手将上下扶手连接起来。

7. Use the quick fastener wrench to fix them.




8. 上下扶手连接完毕后压紧扳手的状态。

8. This is how it looks like when the quick fastener wrench is ready.




9. 将熄火线固定到上扶手上右侧位置。

9. Now we need to fix the brake cable to the right side of the upper handle.

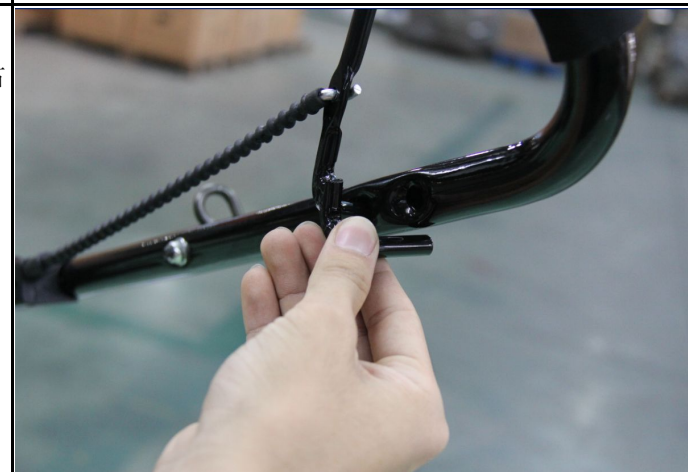

10. 将熄火线穿入熄火操纵杆孔中，然后将熄火操纵杆插入上扶手上对应孔位（上扶手右侧靠下的孔）。

10. Attach the brake cable to the brake lever, and then insert the brake lever into the hole of the upper handle (right side, second hole from the top).

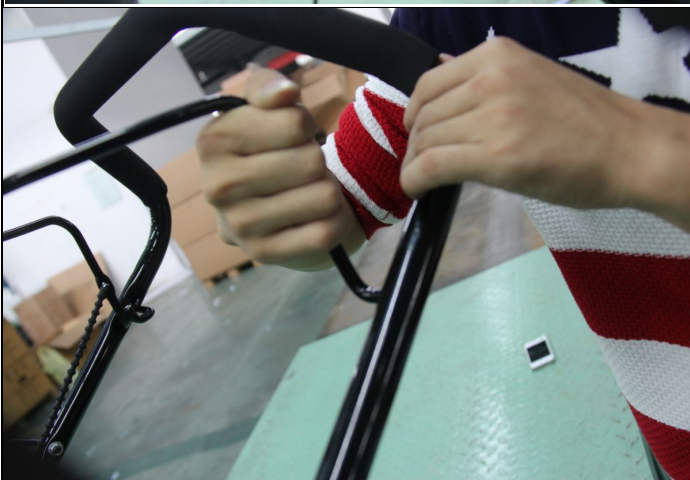

11. 将熄火操纵杆孔另一头插入上扶手左侧靠下孔位。

11. Put the other end of the brake lever into the hole on the left side.



12. 熄火操纵杆安装完毕。

12. Now we have finished fixing the brake lever.



13. 将油门开关固定到上扶手
左侧。

13.The throttle control
need to be fixed to the
left of upper handle.

14. 自走机型则多出一个安装
自走操纵杆的步骤，参照熄火
操纵杆安装步骤。

14.For self-propelled
mower, we need to fix the
self-propel lever. Same
operation as fixing brake
lever.